


<h1>HOW TO</h1>	<b>Document #</b>	<b>Model name</b>		
	HT00139E	ECO-55 / ECO-55ST		
<b>Access the fuses</b>	<b>Model number</b>	<b>Serial number</b>		<b>Date</b>
	DP00070-DP00071	100	to	...
		29-05-2017		

**WARNING**



**HOT SURFACE. ALLOW TO COOL BEFORE SERVICING.**

**DANGER**





**DISCONNECT ALL SOURCE OF POWER BEFORE SERVICING THE STOVE.**


**NOTE**

For part numbers, visit our website at [www.drolet.ca/en/parts/](http://www.drolet.ca/en/parts/)


**PROCEDURE :**

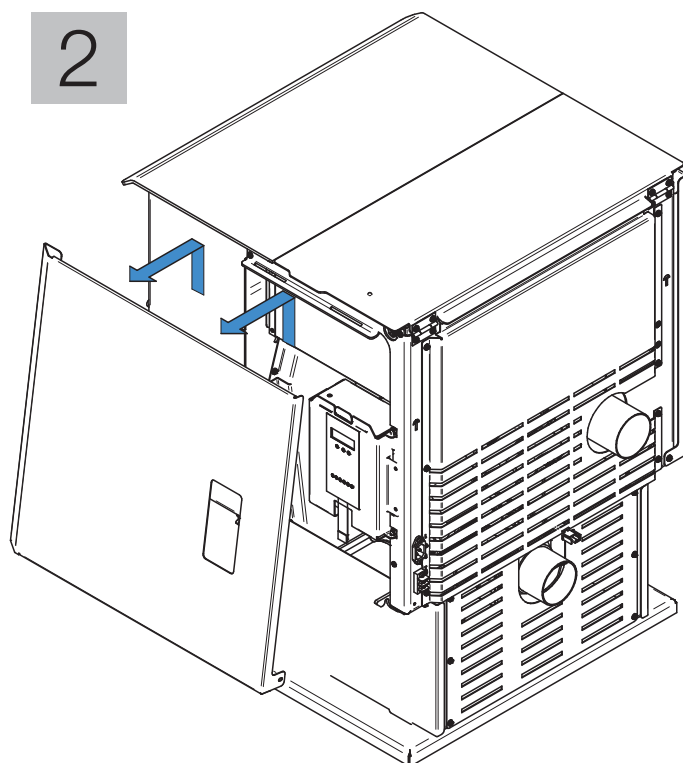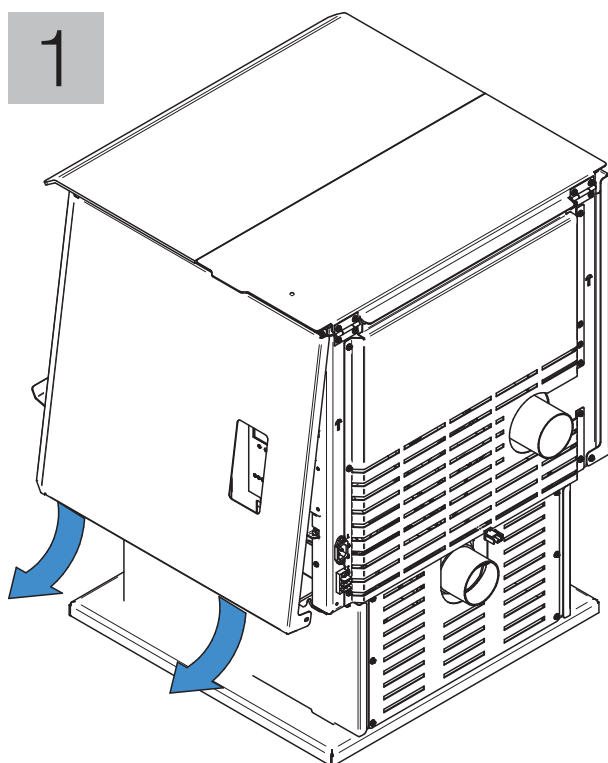


3

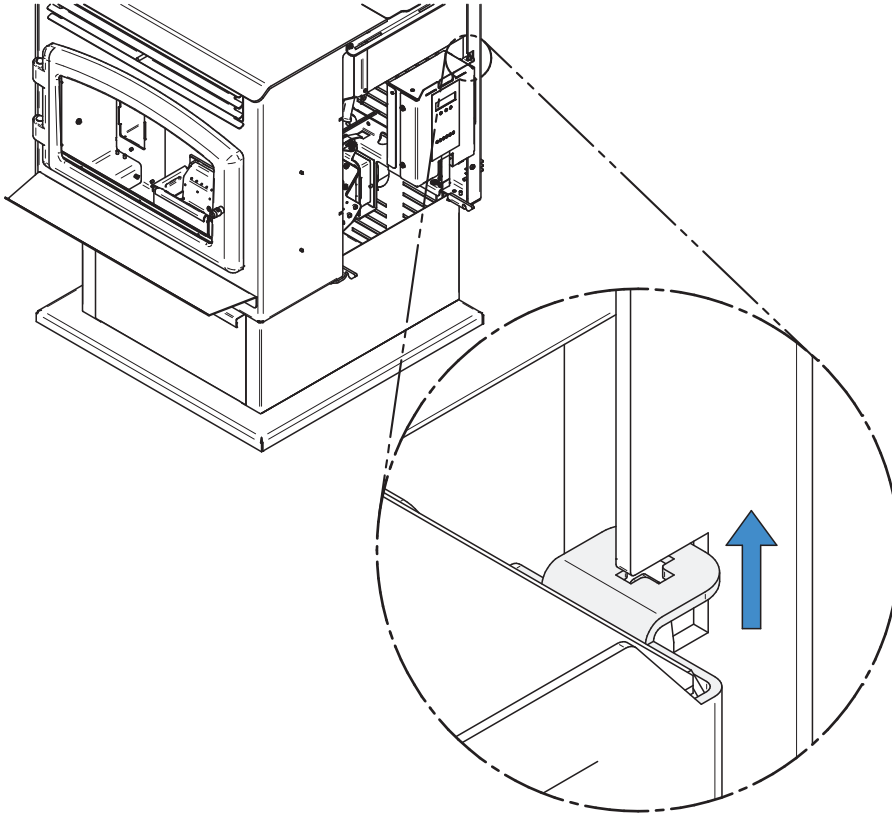


4

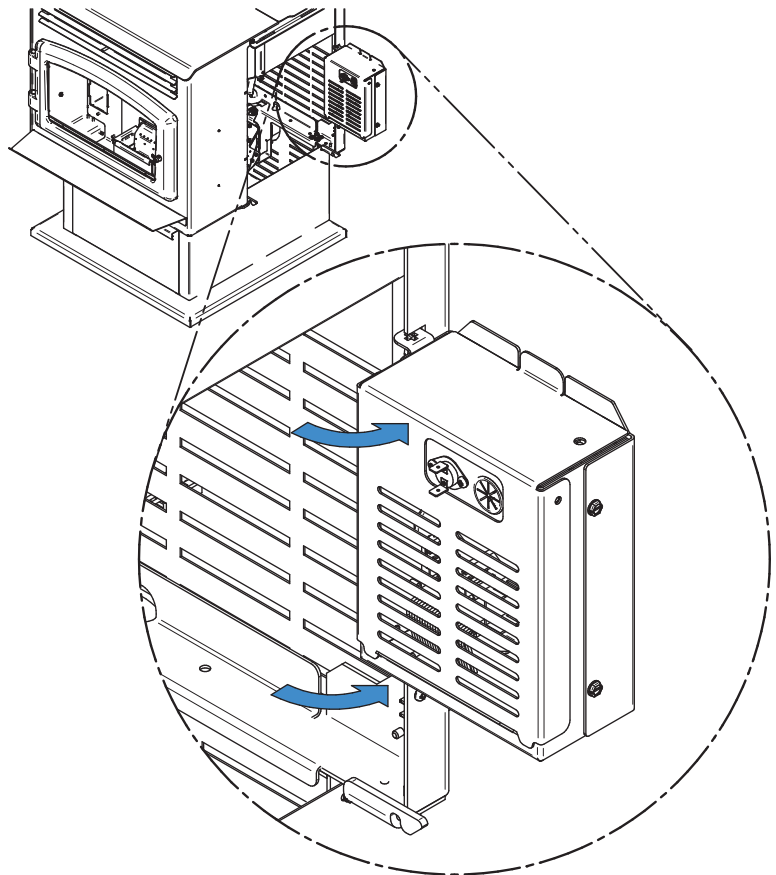


5

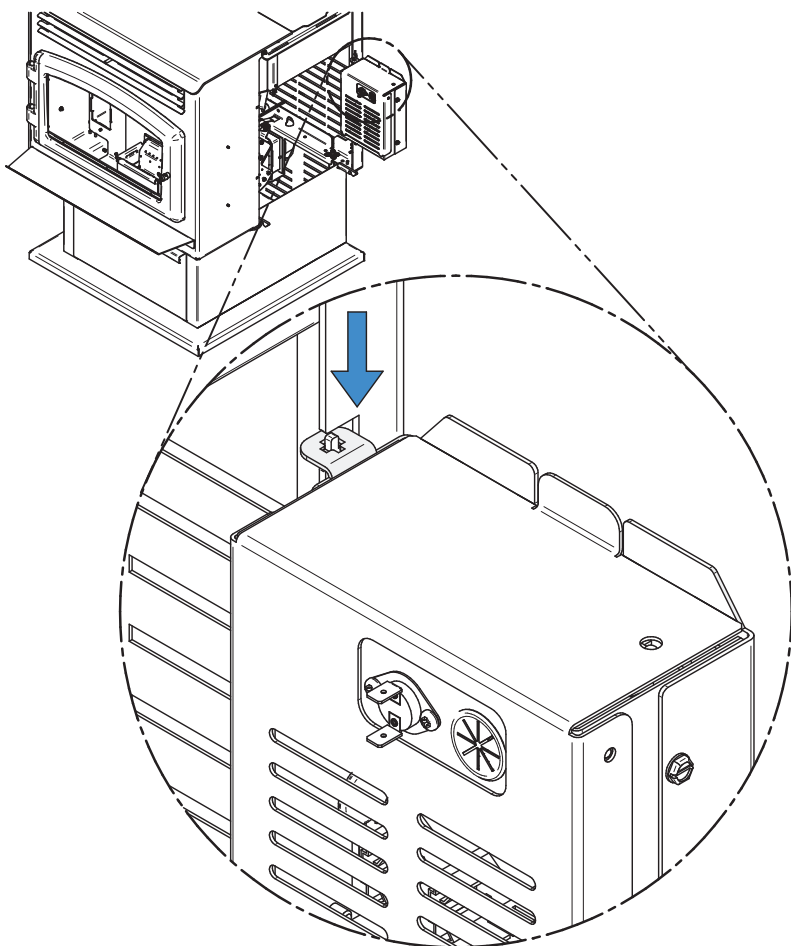

6

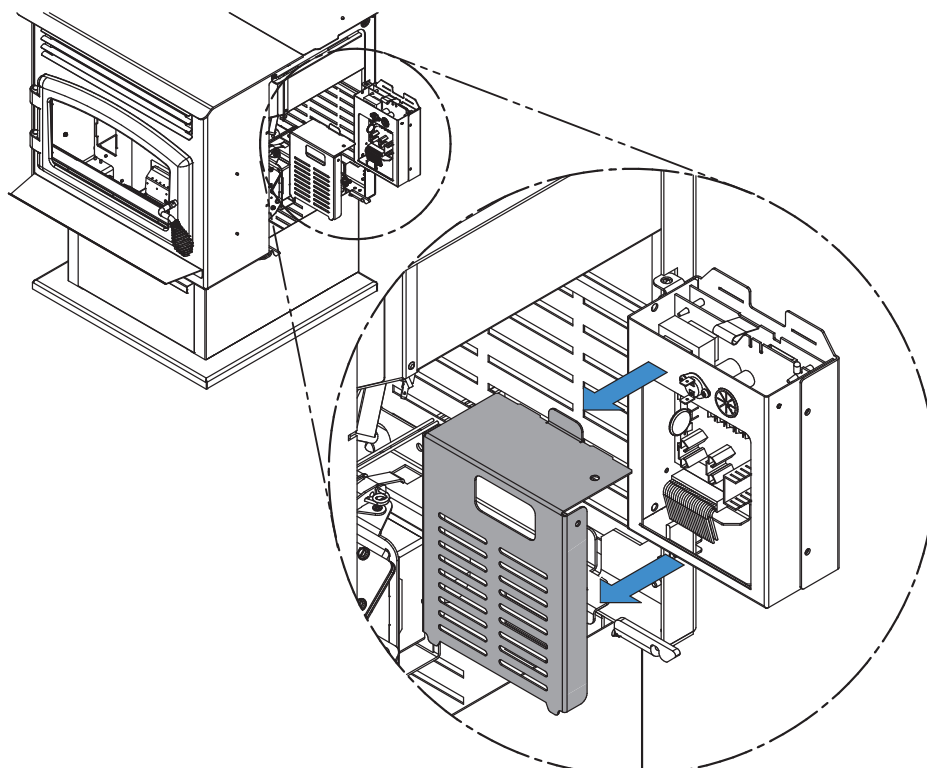

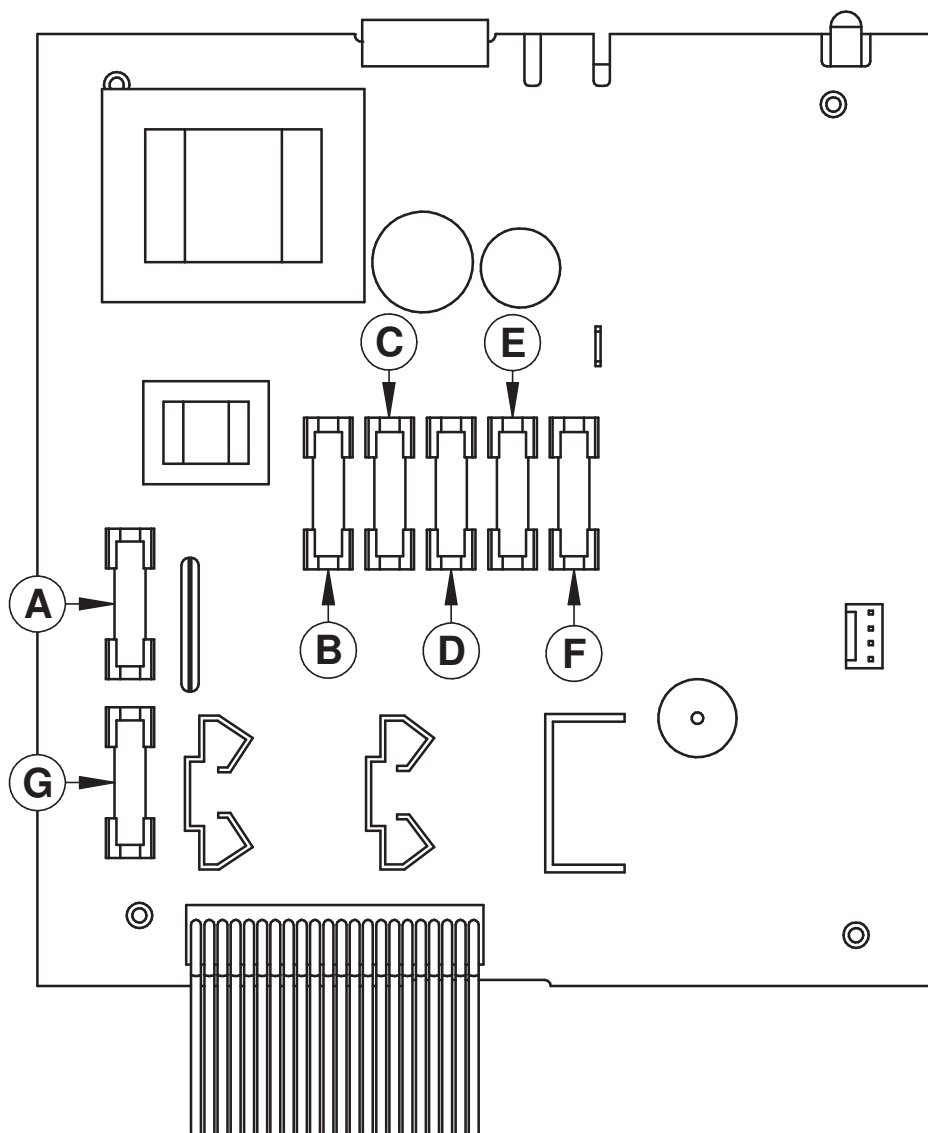

LETTER	FUSES FONCTIONS
A	Control circuit
B	Combustion blower
C	Convection blower
D	Exhaust blower
E	Auger
F	Igniter
G	Main fuse

This document is available for free download on the manufacturer's website. It is a copyrighted document. Re-sale is strictly prohibited. The manufacturer may update this document from time to time and cannot be responsible for problems, injuries, or damages arising out of the use of information contained in any document obtained from unauthorized sources.

Stove Builder International inc.  
250, rue de Copenhague,  
St-Augustin-de-Desmaures (Québec) Canada  
G3A 2H3  
Customer service : 418-908-8002  
Email : [tech@sbi-international.com](mailto:tech@sbi-international.com)  
[www.drolet.ca](http://www.drolet.ca)